

IMPORTANT - PLEASE READ THIS

To run the BITSTIK on the Master Series, it is necessary to select the old 1770 DFS rather than the ADFS. This can be switched in by

*DISK

Alternatively, the machine can be set to power-up with DFS, using the control-panel program on the ADFS Welcome disk. It is also a good idea to set "fast" access when using 80-track drives; this can be done using the control panel, or by

*CONFIGURE FDRIVE 0

It is also necessary to select an external second processor; again, this can be done from the control panel, or by

*CONFIGURE EXTUBE

Note that *CONFIGURE options are stored in battery-backed-up CMOS RAM, and are remembered when the machine is switched off.

IMPORTANT

Note that part of the BITSTIK system loads into sideways RAM 4; any previous contents of this RAM will be lost.