

Econet
printer server
MANAGER'S GUIDE

Contents



Introduction	4
Setting up the printer server	5
Plugging in the printer server EPROM	5
Setting the station number	9
Setting up the printer	10
Using the printer server in the Econet	11
Starting up	11
Header and footer commands	13
Printing from an Econet station	18
Using the printer server as a normal computer	20
Glossary of terms	21
Error messages	22
Service and support	23
Index	23

Introduction

A major advantage of Econet is that it allows several users on different BBC Microcomputers to have access to a central, and often expensive, resource such as a printer. To do this you modify one of the computers in the network into a printer server station, by plugging in a specially programmed EPROM, and this handles output to the printer from the others.

Users on all the terminals can print out on the Econet printer exactly as if they were using their own printers; by typing the instruction to print directly on their own keyboards. The printer server transmits the instruction to the printer and, as far as the user is concerned, the printer behaves exactly as it would if it were attached directly to each machine. The only difference is that the facility is shared, and once one user is printing out the others have to wait until that piece of printing is finished.

Any computer on the network can also have its own printer attached and the user can choose whether to use this or the network printer.

This guide explains how to

- plug in the EPROM and turn the micro into a printer server
- tell the system which type of printer it is using
- set up headers and footers for the data you print out
- control printing from an Econet station
- use the printer server as a computer when it is not printing.

You will also need to look at the BBC Microcomputer System User Guide and the other guides which come with the Econet system.

Setting up the printer server



The printer server is an Econet station — a BBC Microcomputer containing the Econet EPROM and Econet interface components — into which you plug the printer server EPROM. Once the EPROM is in position and the printer service activated, it is available to anyone on the network who wishes to use it.

Before you can use the printer server you need to


- plug in the new EPROM which came with this guide
- set up the station number on the printer server which identifies it to the rest of the network.

Plugging in the printer server software


This section describes how to fit the printer server EPROM to a BBC Microcomputer. If you have any doubt about fitting the EPROM yourself your dealer will be happy to help. Approved Acorn dealers in your area are on the dealer list provided.

To fit the printer server EPROM go through the following steps, very carefully. If by any chance you damage the equipment you will have to have it repaired and it will not be covered by guarantee.


1. Make sure the computer is not connected to the mains power.

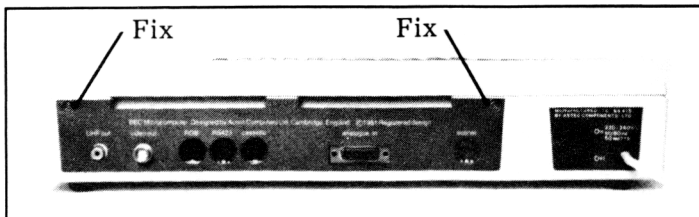


2. Unscrew the two screws in the back panel.

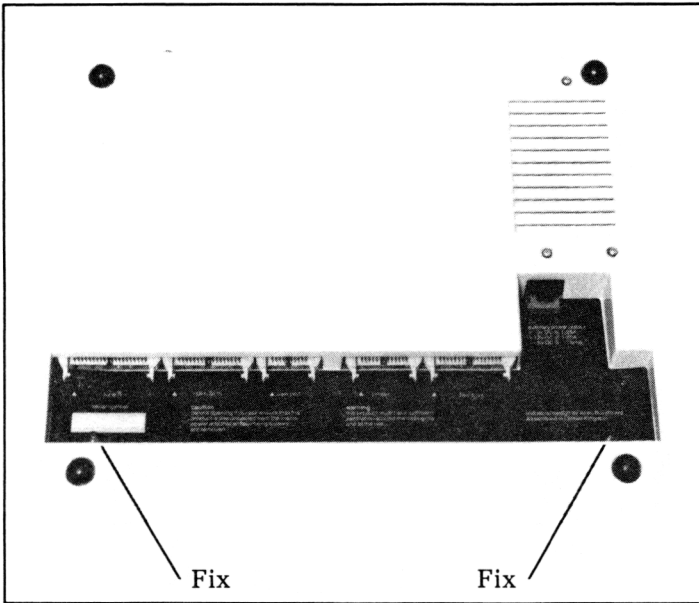


3. Unscrew the two screws on the underside of the computer near the front, and remove the lid carefully.

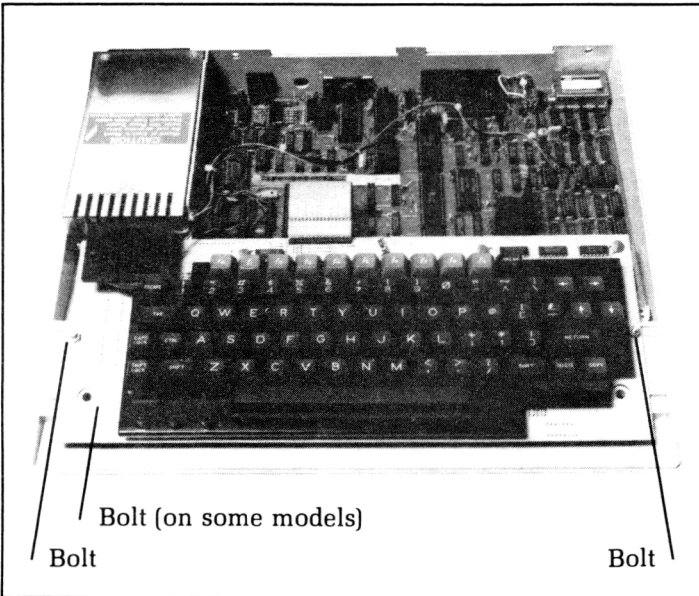

4. Unscrew the bolts holding the keyboard to the case.

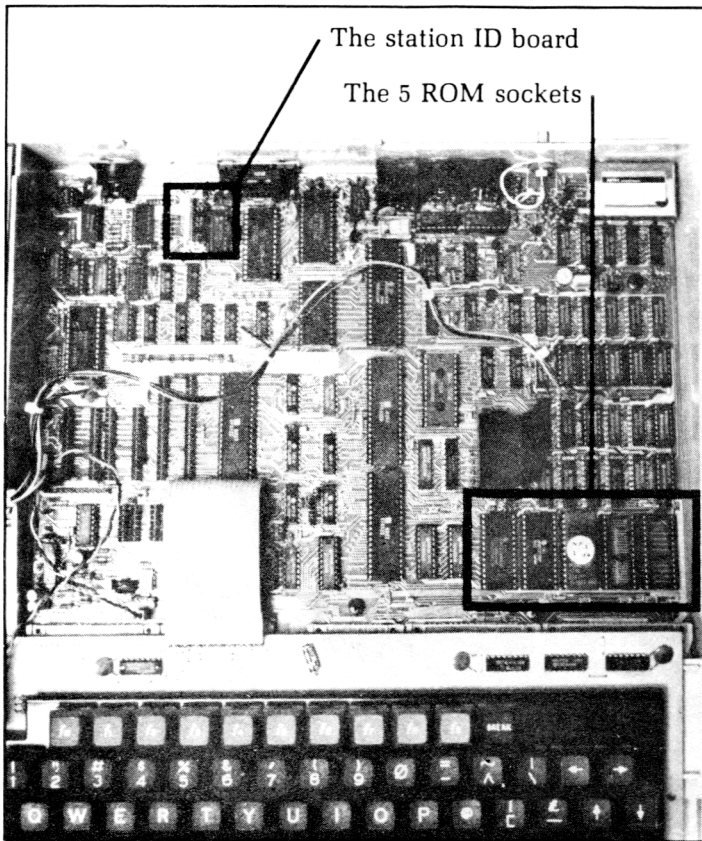

5. Move the keyboard forward from the printed circuit board until you can see the front of the board.

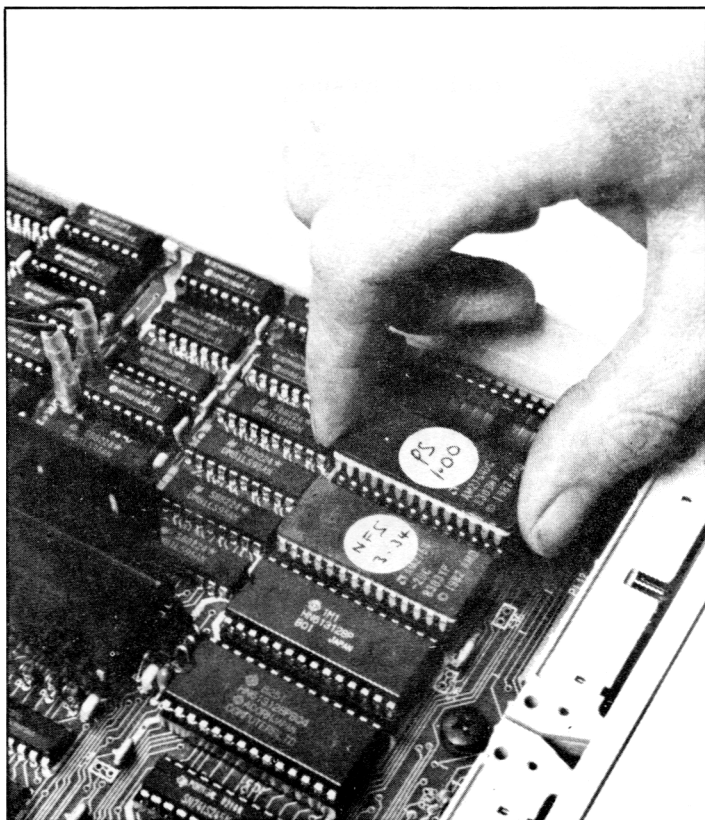

6. You are now ready to plug the printer server EPROM into your machine. The operating system ROM is always fitted in socket IC51 at the left of the board. You may put the printer server EPROM in any of the four remaining sockets which is not already being used.

Unwrap the EPROM carefully and position it over the socket with the semi-circular notch to the top, pointing away from the keyboard. Make sure that all the pins are ready to slide into the correct holes beneath them. Push the EPROM in firmly.

Take great care not to bend the pins as this will damage the EPROM.

7. Replace the keyboard and screw it back down. You are now ready to set the station number of the printer server.


Setting the station number



Before you can use any station in an Econet you must set its station number so that the network can identify it. It is recommended that the printer server is set to the default number 235. If you have more than one printer server set one to 235, and select different numbers for the others.

An Econet station keeps this printer server station number in RAM, in the operating system area. When a user gives the instruction to print at the station it will automatically send the output to station 235 — the printer server — unless you select a different number. (See page 18 for information on printing from an Econet station.)

To set up the numbers, you need to pull off the links at the back left hand corner of the printed circuit board and position them as shown below. (See also the leaflet supplied with your clock and terminator boxes.)

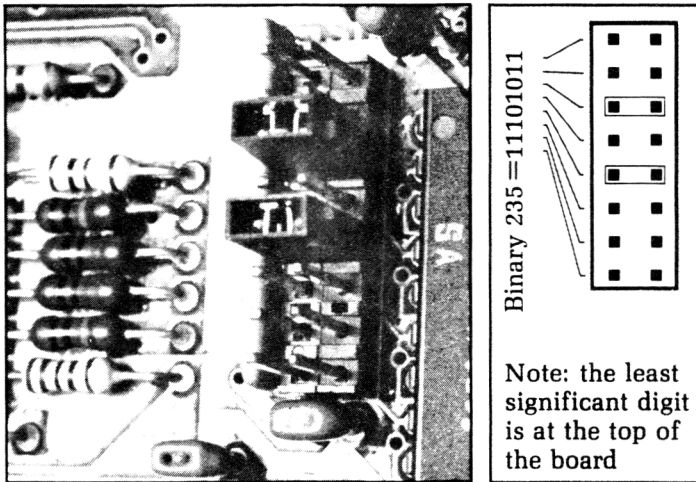

When you have finished setting the station number, refit the lid and replace the screws. Save the links for future use.

Plug the computer into the network.

***HELP**

To check that the new EPROM is working, switch on the computer:

Screen: **BBC Computer 32K**
Econet Station 235
Basic
>

Type: ***HELP[RETURN]**

Screen: **Printer Server 1.00**
NFS 3.34
OS 1.20

This tells you that the printer server EPROM is correctly fitted. There also appear on the screen details about the other ROMs in the machine.

If you do not get this message check that the EPROM is properly plugged in and try again. The most likely fault is that one of the pins has been bent under. If so, contact your dealer.

Setting up the printer

Your computer is now ready to work as a printer server. Plug in your printer selecting either the Centronics Parallel or the RS423 connecting port. Chapter 38 of the BBC Microcomputer System User Guide describes in detail how to connect both types of printer and the commands you need to use with them.

Until you have keyed in certain commands to activate the printer server in the network the printer should work in the usual way as a local printer. Switch on and check that the printer is working properly by typing [CTRL]B followed by some characters on the keyboard. The characters should be printed out, showing that the printer is working correctly.

NOTE: once you've activated the printer service using the command ***PSERV** (see page 12) the printing facility can only be used by other stations on the network. You cannot print from the printer server directly.

The printer server is now ready to be activated.

Using the printer server in the Econet



There are certain commands which you need to use to control printing through the Econet.

Used on both the printer server and other stations:

***FX5, <number>**
identifies the printer connection. At the station it also tells the computer to send its output to the printer server.

Used only on the printer server:

***PSERV**
this activates the printer server and identifies the make of printer.

***PRE *BANNER *POST *ENDTEXT *NOBANNER**
these control the text which is printed at the start and end of each piece of output from other Econet stations.

Used only on other stations:

***PS <server number>**
this is used at the station to select the required printer server if there is more than one. The initial value is 235 by default.

Starting up

Each time you switch the printer server on, or it is reset, you need to activate it and key in the required header and footer text and controls.

***FX**

Each time you switch on the printer server it will assume the printer server printer is attached to the Centronics interface. If you are using the RS423 port you must tell the computer using the ***FX** command.

Type: ***FX5,2[RETURN]**
for the serial RS423 output.

Once you have changed this setting it will remain in force until another ***FX5** is entered or the computer is reset.

You may also have to set the printing data rate (baud rate) to that appropriate for your printer. How to do this is described in the BBC Microcomputer User Guide, which also describes the printer port selection in detail on page 423 and in Chapter 38.

If you wish to change printers and use the Centronics parallel interface

Type: ***FX5,1[RETURN]**

You can use the Econet printer server with the full range of printers that are available for the BBC Microcomputer.

NOTE: you may have two printers connected to the printer server, possibly a dot matrix and daisy wheel printer, using the two different output ports. Use the ***FX** command to select which one the printer server is to use. You cannot carry out this selection at the other stations.

***PSERV**

Typing ***PSERV** starts the printer server program and prepares it to accept output from other stations.

You can add to the command a number which tells the computer which make of printer is attached to it. This facility has been included to pre-program the printer server to be aware of certain features of the most commonly used printers, such as which control codes give you large or bold characters.

The printer codes are

- 1 for the Olivetti JP101 printer
- 2 for the Epson MX-80 and FX-80 printers
- 3 Walters Microsystems WM2000
- 4 Mannesmann - Tally MT180
- 5 Mannesmann - Tally MT140
- 6 MPG994



To use these codes

Type: ***PSERV <number> [RETURN]**

EXAMPLE:

for the Epson printer

Type: ***PSERV 2[RETURN]**

If you do not use these number codes the machine will use the default setting as described on the next page, unless you alter it using one of the other commands.

Header and footer commands

When you send (printed) output to the printer server from an Econet station it will print some text to identify the station. You can alter this text to contain a useful message which will appear at the top of all output.

You may use the following commands to set up strings of stored characters which will be used every time printing is done on the Econet. This is useful to identify work produced by, for example, a single class in a school, or to put the date on to the top of all printing done on a particular day.

You type the commands followed by a string of text and control characters and these remain in memory until the commands are used again. The control characters depend on the printer you are using and allow you to choose, for example, bold type, underlining and large characters in your heading, or banner. Check your printer manual for the correct control characters to use.

If you wish to use a complicated header and do not want to have to set it up every time, you could program one of the function keys on the printer server to carry out these commands automatically. How to program the function keys is explained on page 141 of the BBC Microcomputer System User Guide.

NOTE: the instructions keyed in using these commands apply only to the banners; special treatment in the text sent from the user station is controlled by each user when typing in the text at the station.

***PRE *BANNER *POST**

These define the strings included in the headers which appear at the beginning of each piece of printing. They can only be typed in on the printer server keyboard, not at the user stations.

To use them type:

***PRE <string> [RETURN]**
to set the control codes before the banner

***BANNER <string> [RETURN]**
to set the text to be printed in the banner. The text can be up to 64 characters long, and can include control codes.

***Post <string> [RETURN]**
to set the control codes after the banner.

The header text command, therefore, takes the form

```
<*PRE string> <*BANNER string>  
**Station <number>** <*POST string>
```

The default settings for these commands are

```
*PRE      string = nothing  
*BANNER  string = **[space]Econet[space]  
*POST    string = carriage return line feed
```

In addition the number of the station from which the output is coming is printed after each banner, so that the default banner might look like

```
** Econet ** Station 123 **
```

NOTE: the default strings are changed automatically by any code you typed after ***PSERV** to identify the printer type. (See the table on page 17.)



To insert control characters into any of the printer server text strings use the `;` convention. This is explained in Chapter 25 of the BBC Microcomputer System User Guide. Type a `;` before the relevant control character, for example

`;`M for carriage return
`;`J for line feed
`;`L for form feed
`;`[for escape, which many printers use to identify control sequences.

NOTE: the appearance of the `;` and `[` characters on the screen depends on the mode your machine is running in. In mode 7 the `;` appears as `||` and the `[` as `◀`.

Examples of headers

1. If you do not use the `*PRE` and `*POST` commands, but type

```
*BANNER 21/3/83[space][RETURN]
```

this will produce the header for output from station 123 of

```
21/3/83 ** Station 123 **
```

2. If you are using an Olivetti JP101 printer, double size characters are already set by `*PSERV 1` so the above example will come out in double size.

Type: `*PRE ":[*1"` = turn underlining on
`*POST ":[+!M;!J"` = turn underlining off and print a new line.

This replaces the old `*PRE` and `*POST` settings, but not `*BANNER`, to give a header like

```
** Econet ** Station 243 **
```

3. If you are using an Epson MX-80 or FX-80 printer, type

```
*PRE ";\N" = large characters  
*BANNER "Chemistry Class 111A;\M;\M;\  
<5 spaces> 21 3 83 <5 spaces>"[RETURN]
```

to give a banner like

C h e m i s t r y C l a s s I I I A

21 3 83 ** Station 243 **

NOTE: There is no need for *POST since !M turns off the large characters.

***ENDTEXT**

This is used for text which appears at the end of each piece of work, and often includes line and form feeds to position the next piece of work satisfactorily on the page. You can include up to 64 characters in the footer.

The default setting for *ENDTEXT depends on the number you keyed in after using *PSERV, that is, it depends on the printer being used. (See the table on page 17.)

Examples of footers

If your printer will carry out a form feed, that is move straight to the start of the next new page, typing

***ENDTEXT !L [RETURN]**

will print a form feed at the end of each station's output.

***ENDTEXT *** END OF OUTPUT *** !M!M!M!M!M**

will print the following footer on a printer which will do automatic line feeds.

***** END OF OUTPUT *****

followed by five new lines.

The footer is printed after the station user types in [CTRL]C to tell the printer server that all the text has been printed. This is explained on page 18.

Values of *PRE *BANNER *POST and *ENDTEXT for different printers



The following table shows the strings which are automatically used for these commands when you add an argument (number) to *PSERV.

*PSERV Argument	Printer Make	*PRE	*BANNER	*POST	*ENDTEXT
0			**ECONET	!M!]	!L
1	Olivetti JP101	!3!'	**ECONET	!4!%!M!]!M!]	10 linefeeds
2	EPSON MX-80 & FX-80	!N	**ECONET	!T!M!]!M!]	!L
3	Walters Microsystems WM2000	!(!O	**ECONET	!(!N!M!]!M!]	!L
4	Mannesmann- Tally MT180	![[Ow	**ECONET	![[4w!M	!L
5	Mannesmann- Tally MT140	!N	**ECONET	!O!]!M	!L
6	MP1 99G	!(!N	**ECONET	!(!O!M	!L

*NOBANNER

Use this command if you wish to remove the banner completely from your printing. For example, if you were using the Econet to print out a series of letters or forms you would not wish to have the station number printed at the top of each. To remove the banner type

***NOBANNER [RETURN]**

When you want to start printing the banner again use *BANNER to set it up afresh.

Printing from an Econet station

Once the printer server is activated each station uses it exactly as it would its own printer, except that you may sometimes have to wait if another station is printing out. To select the printer server, rather than a local printer, use the command ***FX**; and ***PS** if there is more than one printer server in your network.

1. If there is more than one printer server you must first tell the computer which one you wish the output to go to. If you are using the printer server with the default number, 235, this is not necessary, but if you wish to select another printer server

type: ***PS <number> [RETURN]**

where number is the printer server number. (See page 9.)

NOTE: this is loaded from the file server as a command program so you must be logged on to a file server to use it. (See the manual which came with your Econet system.)

If there is only one printer server you do not need to use this command at all.

2. The first time you use the printer server after your station has been switched on the computer needs to know that you wish to output to the printer server printer, not a local printer.

Type: ***FX5,4 [RETURN]**

to select the printer server printer. You will also have to use this command after the machine has been "hard reset" using [CTRL] and [BREAK], or after a "Not Listening" or "No Reply" message.

3. When you are ready to print out

press: **[CTRL]B**

printing will begin automatically, starting with the header text, followed by anything displayed on the screen after you pressed [CTRL]B. If someone else on

the network is already using the printer you will see the error message



Not Listening

on your screen after a 30 seconds delay. If this happens wait and try again. Or save your work on disc and print it out when the printer is free later on.

NOTE: you can also use the control VDU2 instead of [CTRL]B if you are working in Basic.

BBC Microcomputer local printing facilities such as *FX6 and VDU1 will operate over the network exactly as if you were using a local printer.

4. When printing is complete

press: **[CTRL]C**

to tell the printer you have finished and print the footer text.

NOTE: you can also use the control VDU3 instead of [CTRL]C if you are working in Basic.

5. If you do not press [CTRL]C and remain linked up to the printer server you will prevent anyone else from using it. For this reason if you do not print anything for 30 seconds at any time after you have pressed [CTRL]B the printer server will become available for someone else to use. If after this, someone at another station presses [CTRL]B you will lose control of the printer and it will print the text set up using *ENDTEXT.

If you then try to print you will see the Not Listening message.

To continue printing after this has happened you will have to start again by pressing [CTRL]B.

If no one else presses [CTRL]B you can carry on printing as normal.

Using the printer server as a normal computer

The printer server is an ordinary BBC Microcomputer with some extra features, so that it can be used in the normal way, and as an Econet user station, before you activate it as a printer server in the network. After this has been done, however, if you want to continue to use the printer server as a station you have to take certain precautions.

1. NEVER press [BREAK] at any time. This will interrupt its function as a printer server and clear any instructions it is following, such as headers and footers. It will also stop the printing which is taking place when the [BREAK] key is pressed. [BREAK] deactivates the printer server and you have to start up again.
2. You cannot print from the printer server itself while it is activated, except by filing to disc and printing from another station.
3. If you are programming you should be aware that
 - the printer server uses two pages (512 bytes) of memory, so that the values of PAGE and OSHWM are raised accordingly
 - the printer server intercepts the EVENT vector so that your program should not use this or disable/enable any events
 - the RS423 at baud rate 19200 should not be used as its performance is degraded by the processor time required by the printer server.
4. If your Econet EPROM is issue 3.34 you should not use a local disc system (BBC microcomputer DFS). If the issue is 3.35 or above, then a local disc system may be used.

Glossary of terms

**Control characters**

characters which are not printed, and which cause the printer to perform special tasks, such as carriage return and graphics

Default

a setting or value given automatically until it is altered from the keyboard

EPROM

erasable programmable ROM

Footer

text which can be printed at the end of each item printed via the printer server

Header

heading which can be given to each item printed via the printer server

Local printer

printer attached directly to the Eiconet stations, not accessed by the printer server

ROM

read only memory

String

a list of characters and control codes which can be enclosed in quotes, and can be used with a command.

Error messages

The printer server produces the following messages.

At the printer server:

Too long **169**

You have used too many characters in either your
***PRE**, ***BANNER**, ***POST**, or ***ENDTEXT** strings.

The limits are:

*PRE	30
*BANNER	64 characters
*POST	64
*ENDTEXT	64 characters

Wrong printer type **170**

You have given a code, or argument, to the ***PSERV**
command which is invalid.

Bad string **253**

You have used mismatched quotes, such as
***BANNER "ABC**

At the user station:

Not Listening **162**

The station cannot connect to the printer, because it is
already being used, hasn't been started properly, or
isn't present at all.

No Reply **165**

The printer server has been stopped during printing,
probably by someone pressing [BREAK] on the printer
server keyboard.

Service and support



If you have any problems with setting up or running the printer server, or need any advice, contact one of the following:

A dealer from the national network of Acorn approved dealers (see your dealer list).

Acorn Computers Limited, Technical Enquiries,
Fulbourn Road, Cherry Hinton, Cambridge CB1 4JN

Index

Activating the printer server	12
*BANNER	14
Banner design	15
Control Codes	13-16, 21
Damaged EPROM pins	10
Default banner	14, 17
*ENDTEXT	16
Error messages	22
Footer	13, 16, 19
Form feeds	15, 16
*FX	11
Header	13
*HELP	10
Identifying the printer server	9, 18
Installing	5

Line feeds	15, 16
Local printer	20, 21
*NOBANNER	17
No reply	22
Not Listening	19, 22
Plugging in	
the printer server EPROM	5
the printer	10
*POST	14
*PRE	14
Printer codes	17
*PS	18
*PSERV	12
Removing the banner	17
Restrictions on using the printer server	20
Selecting the printer port	10, 18
Station number	
Printer server	9
Selecting from more than one printer server	18
Setting up	9
String	21
Testing the printer server	10
Types of printer	17
Unscrewing the case	5, 6

